

VT100 Terminal Jumpers

Text Color:

Set the color of the terminal text/graphics

R: Red

G: Green

B: Blue

RG: Yellow

GB: Cyan

RGB: White

Prog Header:

Standard Microchip programming header, functions are on the silkscreen

Buzz_en:

Enables the onboard buzzer, also controlled via the configuration screen

Both must be enabled for the buzzer to sound.

JP1 (Yellow jumper)

Enables use of the 5v DC-IN barrel connector for power.

Do not connect USB cable and DC-IN at the same time with jumper enabled

Handshake Signals (white jumpers)

Loop backs for devices that need to see hardware signal lines active:

DCD: Device DTR to DCD

DSR: Device DTR to DSR

RTS/CTS: CTS to RTS

TTL:

TTL level serial signals (for newer devices that use TTL serial instead of actual RS232)

1: GND

2: TX

3: RX

4: +3.3v